



ASSA ABLOY

# LOCKWOOD 8653 SECURITY SLIDING DOOR LOCK INSTALLATION INSTRUCTIONS

Part No. 8653-121 Iss. C 1111

**1** Cut out door sections to dimensions shown on both sides of the door stile.

Technical drawing showing dimensions for the door cutout: 15.5 slot min., 25, Ø3, 172, 160, 60, 19, 60, Ø3, 19.

**2** Ensure Hubs are aligned so that Snib Selector can move freely. Adjust Interior Snib Selector by rotating the selector screw with a screwdriver. The arrow must point towards the interior face of the door when lock is fitted. **Do not overtighten.**

Diagram showing adjustment of the Snib Selector with a screwdriver. Labels include Hub, Snib Selector, and Selector Screw.

**3** With the lock body in the factory set Deadlock position, insert into cutout and secure with two 12mm countersunk self tapping screws supplied.

Diagram showing the lock body being inserted into the door cutout and secured with screws.

**4** **Assembling Indicator to lock.** Slide Indicator wheel to required side prior to assembly. Drive post can only be inserted in lock body in the correct position. Insert lock indicator into interior side of lock body as shown.

Diagram showing the indicator wheel being slid and the indicator being inserted into the lock body. Labels include Yellow plastic washer.

If a rectangular punch is used, insert plastic washer as shown.

**5** Position Exterior snib plate into position on the external furniture plate as shown.


Diagram showing the exterior snib plate being positioned on the furniture plate.

**6** Secure furniture plates to door section. Secure with two 25mm screws supplied.

Diagram showing the furniture plates being secured to the door section with screws.


7

Position the cylinder assembly in the lock body so that the cam rotates towards the front end of the door. Secure with 32mm countersunk metal thread screw supplied. **Do not overtighten this screw as it may jam the locking mechanism.**

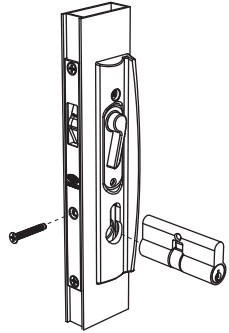

9


Insert striker into lock body to test operation.

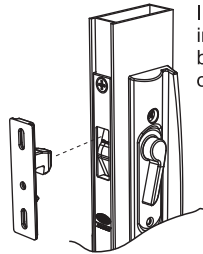

Rotating the key 90° will place the lock into 'Privacy Mode'. The indicator will show Yellow. The external snib will be locked and the internal snib free to operate. Alternatively turn the internal snib towards the door jamb to place the lock in Privacy mode.




 Rotating the key 180° will place the lock into 'Deadlock Mode'. The indicator will show Red. Both the external and internal snib will be locked and the lock can only be unlocked by using the key.



8


With the cylinder assembled, insert key and rotate to the unlocked condition, 'Passage Mode'. The indicator will show green and both snibs will be free to operate.

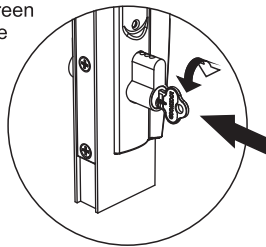

10


**Mounting the Striker**

With the striker inserted in the lock body, mark the position on the outside of the jamb, or remove the backing from the tape and allow the striker to stick to the frame. Remove striker from lock body.

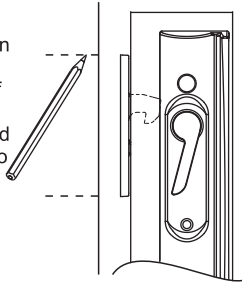

11

Drill two Ø3mm holes and fit to door jamb where marked using 12mm countersunk screws. Adjust striker to correct position and then drill final Ø3 hole in centre and secure. For timber jambs use longer screws provided.

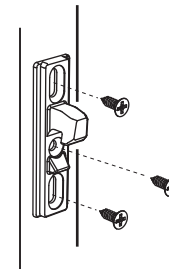

**LOCKWOOD GUARANTEE**

ASSA ABLOY Australia Pty Limited ("ASSA ABLOY") warrants its Lockwood products against defects in workmanship and materials, subject to the limitations and exclusions set out in this Warranty. If, within the normal working life of a product, it is found to be defective, and none of the limitations and exclusions set out in this Warranty apply, ASSA ABLOY will supply the same or equivalent product free of charge. This is the only remedy granted by ASSA ABLOY under this Warranty. Limitations: All electrical and electronic components used in ASSA ABLOY's Lockwood range of products (excluding batteries) are guaranteed for a period of 12 months from the date of proof of purchase, unless stated otherwise. Exclusions: This Warranty does not cover: 1. Damage to or malfunction or failure of the Lockwood product caused or contributed to by: (a) improper installation or failure to follow fitting instructions; (b) improper maintenance; (c) fair wear and tear; (d) any modification or repair which has not been authorized by ASSA ABLOY; (e) use of substitute or replacement parts or cylinders other than genuine ASSA ABLOY parts or cylinders; or (f) use of batteries other than those specified by ASSA ABLOY. 2. The cost of: (a) removal and/or replacement of the Lockwood product; (b) freight and/or traveling time; (c) replacement batteries; or (d) any modification or repairs to a Lockwood product, unless authorised by ASSA ABLOY. 3. Damage to or deterioration of the plated finishes Florentine Bronze, Architectural Bronze, Polished Brass, Gold and Satin Brass, which are classified as soft finishes, and are subject to deterioration under some environmental conditions. 4. Personal injury, property damage or economic loss, however caused. Symmetry® 5 Year Finish Warranty: ASSA ABLOY Australia Pty Limited will replace five-year branded Symmetry product if within five years from the proven date of purchase it tarnishes, discolours or corrodes when properly installed and subject to no more than fair wear and tear. Symmetry® Everbrass® Warranty: Everbrass product is coated both on the exterior and interior surfaces with a lifetime anti-tarnish finish. ASSA ABLOY Australia Pty Limited will replace Everbrass branded product if it corrodes, tarnishes or discolours when properly installed and subject to no more than fair wear and tear. This Warranty is in addition to and not in substitution for any rights of the purchaser under the Australian Consumer Law and state or territory legislation.