

Pacer Interior End Fold Series Installation Instructions

800-824-3018 • www.pemko.com

Folding Doors and Room Dividers - Up to 165 lbs / Up to 36" Wide x 106" Tall

 Manufactured by
HENDERSON



Two Panel: Plan 1
PIF2/165A Kits Include:

- 1 ea 600A Mill Finished Aluminum Track
- 1 ea 21B/P Top and Bottom Pivot Assembly
- 1 ea 21BO/4 Nylon Body and Wheels, Zinc Coated Steel Pendant Bolt and Door Bracket Hanger
- 1 ea 21N/94 Nylon Roller Guide on Zinc Coated Steel Door Bracket Bottom Guide
- 4 ea 403/2 Aluminum Alloy Butt Hinges
- 1 ea 94A Aluminum Guide Channel


Four Panel: Plan 2
PIF4/165A Kits Include:

- 1 ea 600A Mill Finished Aluminum Track
- 2 ea 21B/P Top and Bottom Pivot Assembly
- 2 ea 21BO/4 Nylon Body and Wheels, Zinc Coated Steel Pendant Bolt and Door Bracket Hanger
- 2 ea 21N/94 Nylon Roller Guide on Zinc Coated Steel Door Bracket Bottom Guide
- 8 ea 403/2 Aluminum Alloy Butt Hinges
- 1 ea 94A Aluminum Guide Channel

Standard Kit Sizes			
Part Number	Material	# of Panels	Track Length
PIF2/165A/6	Aluminum	2	72"
PIF4/165A/6	Aluminum	4	72"
PIF4/165A/8	Aluminum	4	96"
PIF4/165A/12	Aluminum	4	2 @ 72"

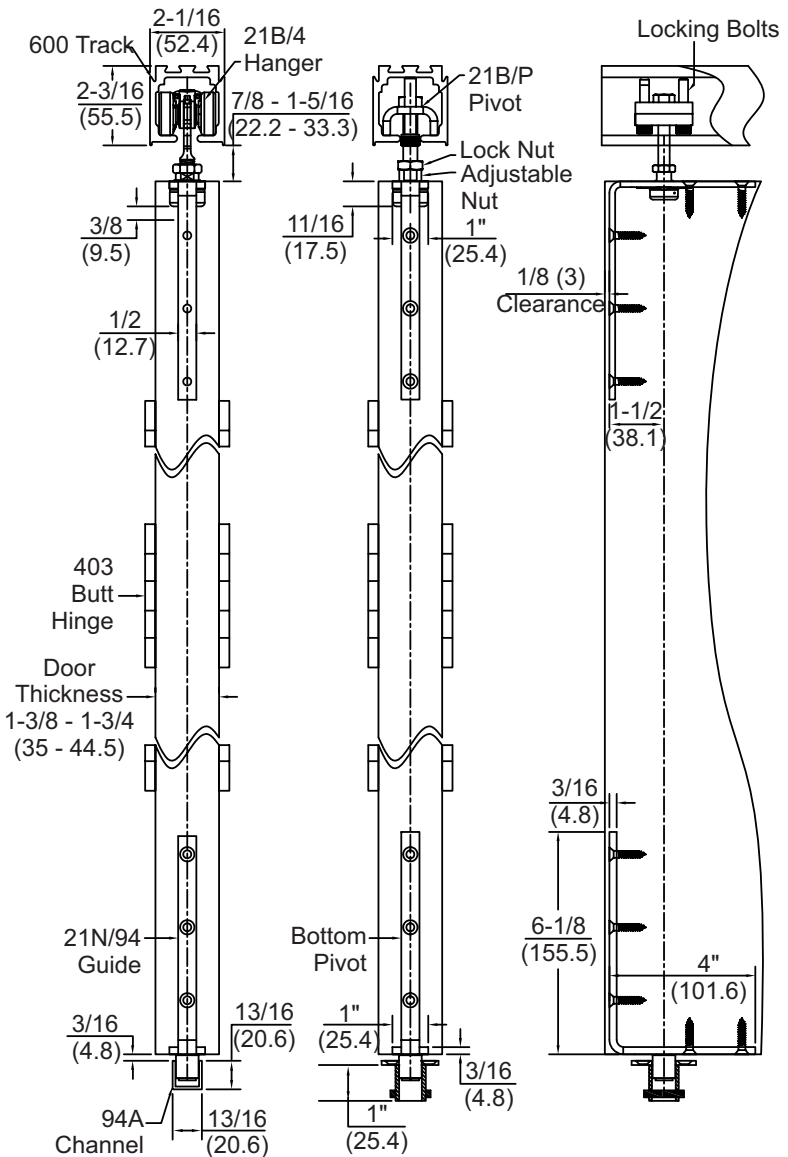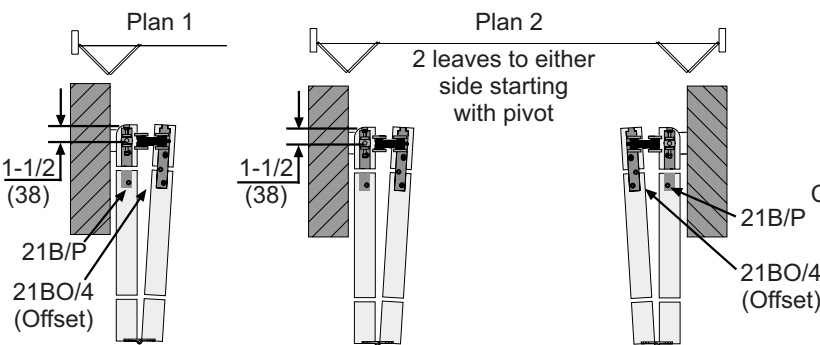

NOTE: Allow 3/8" (9.5) clearance at pivot jambs and 1/8" (3.2) in between hinged doors if hinges are semi mortised. Allow 7/16" (11) between hinged doors if hinges are surface mounted. Allow 1/8" (3.2) between doors meeting in the center of the opening on PIF4 kits and allow 1/8" (3.2) between wall and end panel on PIF2 kits.

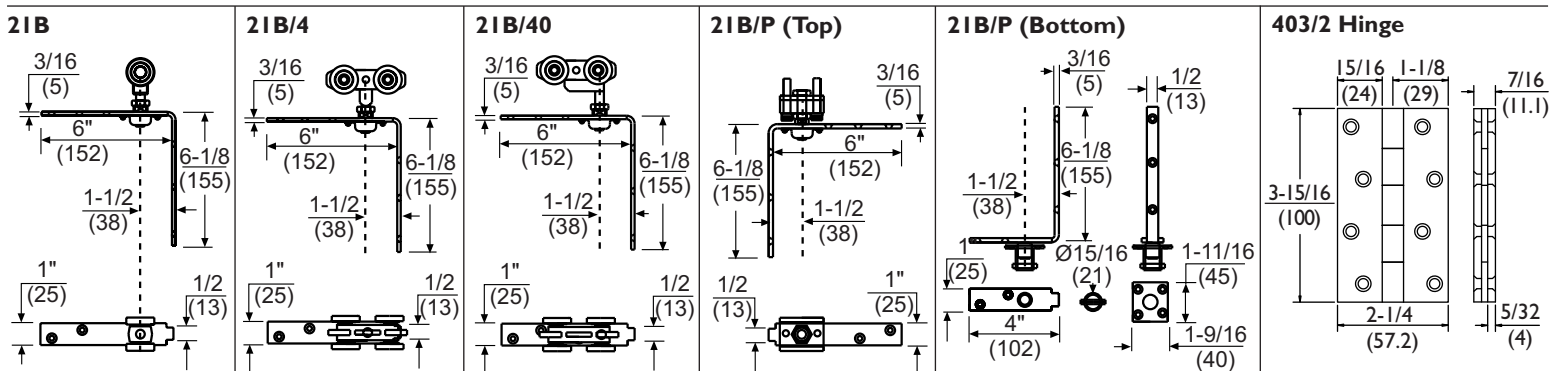


INSTALLATION INSTRUCTIONS

1 Mark and pre-drill track.

Begin track installation by installing correct blocking/support where needed. The next stage is to mark out center of track and pre-drill track along its centerline at no more than 20" (500mm) distances.


Ensure that site is prepared to best possible standard; to ensure easy installation and smooth operation of doors.

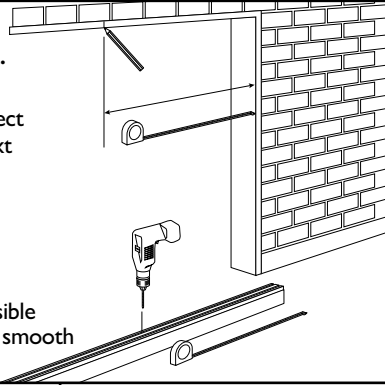

2 Fit track.


Using 5/16" (8) bolts or screws, loosely fix each end of track and check alignment using a level. Once track is correctly aligned, tighten end fixings and then securely fix track at all fixing points.

Before the last piece of track for opening is installed, insert a hanger into it.

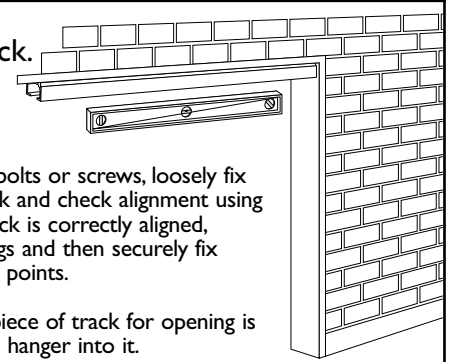


3 Mark floor channel.

Attach a plumb line to a hanger. Using the plumb line, mark out the centerline of the floor channel.

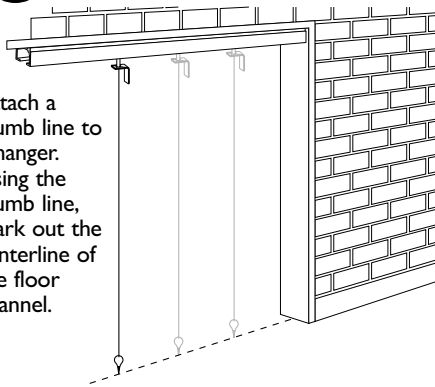


4 Attach floor channel.

Fix floor channel into floor. Note: Check distance between track and floor channel at several intervals along track. If installing pivot gear, ensure that channel is cut to correct length to accommodate 2-3/4" (70) required for pivot socket.

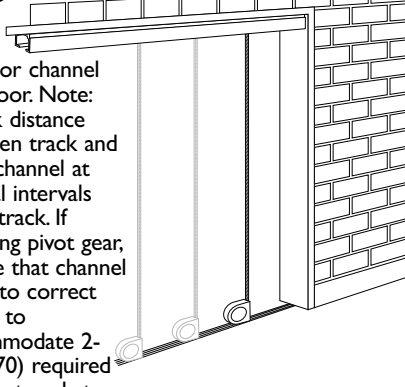


5 Remove track section.

Remove a section of track. If installing a pivoting leaf or one hinged to a post, remove section of track at opposite end to pivoting/hinged to post leaf.

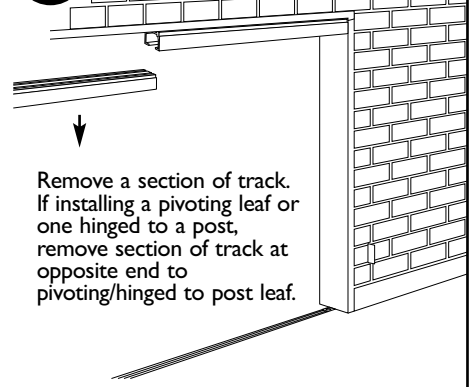


6 Position pivot in track.

 Position pivot in track (this distance can be calculated from diagram A), then using a plumb line attached to pivot, mark center of bottom pivot socket. Depending on floor, drill and insert or set pivot socket in place.




 If not using a pivot assembly, all leaves are of equal width except leaf hinged to the post. The dimension for leaf hinged to post (X) is A less B (1/2 leaf thickness), less 1-1/2" (38). Formula $X=(A-B)-1.5$ (38)




7 Attach hardware to doors.

Attach hangers, guide aprons, bottom pivots and hardware to doors. Ensure that all clearances are adhered to and that if using a pivot door that appropriate corners are rounded. It is generally easier to fit pivoting door apron to top pivot and insert and fix top pivot assembly in its final position in track before attaching pivoting door.

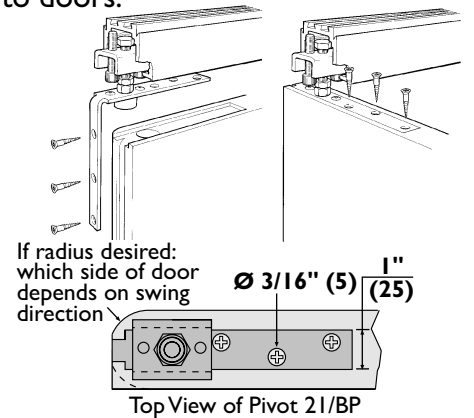

8 Attach doors to track.


Lift doors to track and attach hanger strapbolts to aprons mounted on doors. Adjust hangers to correct clearances and tighten lock nut.

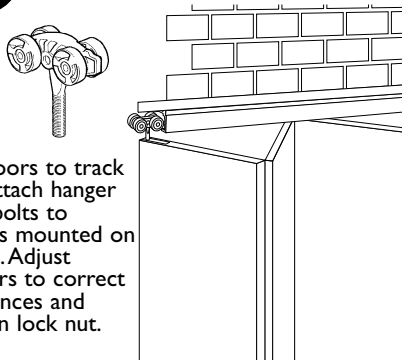

If system is to be hinged to a post attach that unit to required side of opening.

9 Replace track section.

Replace section of track removed earlier. Check floor channel alignment and alter if necessary. Tighten in position.

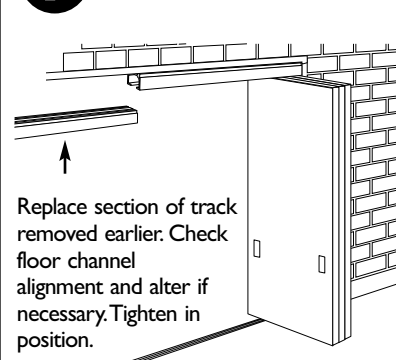

10 Final Adjustments

Visually check all bolts and screws, tighten if necessary. Check operation of doors for ease of use. Things to look out for:

- Doors do not fold correctly - leaf widths may be incorrect and calculations should be checked. Also the end guide may not be set correctly.
- Hangers work loose after several operations - tighten lock nut.
- Guides lift out of floor channel, or door guides catch floor channel at one end - check track is level with level. Ensure that track and floor channel are parallel to within $\pm 1/8"$ (3) from end to end.
- Doors are hard to operate - realign floor channel to track.